


UHP-100 SET-UP INSTRUCTIONS

- Load the FILTER into the UHP-100 HOUSING first with the finer layer of foam facing outward. Then insert the RETAINER SCREEN. Ensure that you have correctly aligned the TARGETING LASER HOLE of each piece.

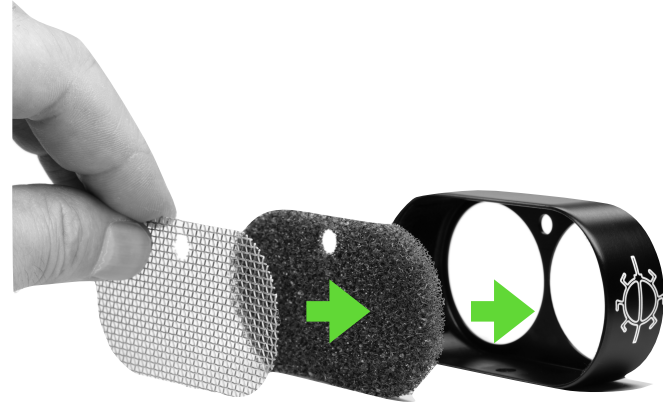

- To place the UHP-100 on your BASE SENSOR gently squeeze the HORNS towards each other. The HORNS have enough flex to allow the UHP-100 to easily slide over them. The UHP-100 is lined with FELT PADS to prevent any unwanted abrasion. Once on, push the UHP-100 against the end of the HORNS to ensure it is seated firmly. When mounted on the camera use the TIE-OFF HOLE located under the PRODUCT ID CODE if further security is required.



- In the event you feel there is not enough flex to easily fit the UHP-100 over the horns, use the included Allen key to loosen the outer screw of each horn. Compensate for the tension you have taken off the outer screw by tightening the inner screw to avoid loose horns. Tighten finger-tight.



PLEASE NOTE: When using X-WIDE FIELD with the UHP-100 there is a slight chance you may be required to set a near LIMIT value of 1' 3" (39cm) in order to avoid accidental triggering of the Cine RT System's minimum range distance. X-WIDE FIELD requires the system to "listen harder" (higher SENSITIVITY) at closer distances and thus can potentially "read" the UHP-100 if it is not snug against the horns. The latest firmware has fixed this issue.